

# GETTING STARTED

## Wireless Outdoor Camera

Welcome to your Wireless Outdoor Camera. Follow the simple instructions below and you'll be up and running in no time.

1 Connect AC power to camera near wireless router and wait 1-2 minutes for Status LED on back of camera to turn flashing white

2 On a smartphone, tablet or computer, connect to the network "**Alarm(##:##:##)**"

**Note:** *These numbers will vary by camera.*

3 Go to **<http://ADCsetup>**

4 Choose English, then **Scan for Wi-Fi Networks**

5 Select your Wi-Fi network from the list, type in your network's password and click **Save**

6 Wait 1-2 minutes for the Status LED light to turn solid green, then log into your **MyFrontpoint.com** account and click the **Video** tab

**Note:** *You will need to reconnect your device to your Wi-Fi network if it was used for the previous steps.*

7 If this is the first time you've added a camera to your system, follow the onscreen prompts.

If you already have a camera connected to your system, click **Video Device Settings**, then click **Add Video Device** at the bottom of the page and follow the onscreen prompts.

**NEED HELP? [WWW.FRONTPOINT.COM/HELP](http://WWW.FRONTPOINT.COM/HELP)**