



GET TO KNOW

Control Panel

Here are the key features of your new panel. Keep this card near your panel for easy reference while you get the hang of your system.

1

DOORS + WINDOWS:

- Press *once* to arm in *Stay Mode* – This will arm your Door and Window, as well as Glass Break Sensors, with a 30-second delay before the siren sounds when a door is opened. For use when your home will be occupied.
- Press *twice* to arm with *No Entry Delay* – When a door is opened while the system is armed, an alarm will sound immediately.

2

MOTIONS:

- Press *once* to arm in *Away Mode* – This will arm all of your sensors. For use when the home will be unoccupied.

3

STATUS:

- Press *once* to hear status messages.
- To *clear* old alarm messages, press the *Disarm* button after listening to the message.

4

PANIC:

- Press the *Cross* if you're experiencing a medical emergency.
- Press the *Shield* to summon the police.
- Press the *Flame* to report a fire.

Disarming

Enter your 4-digit master or user code to disarm your system from the panel.

Bypassing

If there are sensors in your system that you don't want to trigger an alarm (e.g. leaving a bedroom window open at night), you can bypass them after the system has completed arming:

- 1 While the system is armed, press the Bypass button.
- 2 Enter your master code
- 3 Use the menu navigation buttons at the top-right corner of the panel.
- 4 Scroll to the desired sensor and press OK.

**Life Safety and Environmental Sensors (Carbon Monoxide, Smoke and Heat, Water and Flood, etc.) are always armed, even when your system is not.*

IN THE EVENT OF AN ALARM

The siren will sound and your panel will automatically contact our monitoring station. Enter your master code to disarm the system and silence the siren.

Call to cancel a false alarm:

800-932-3822